


5-Spoke Net Deck Install Instructions

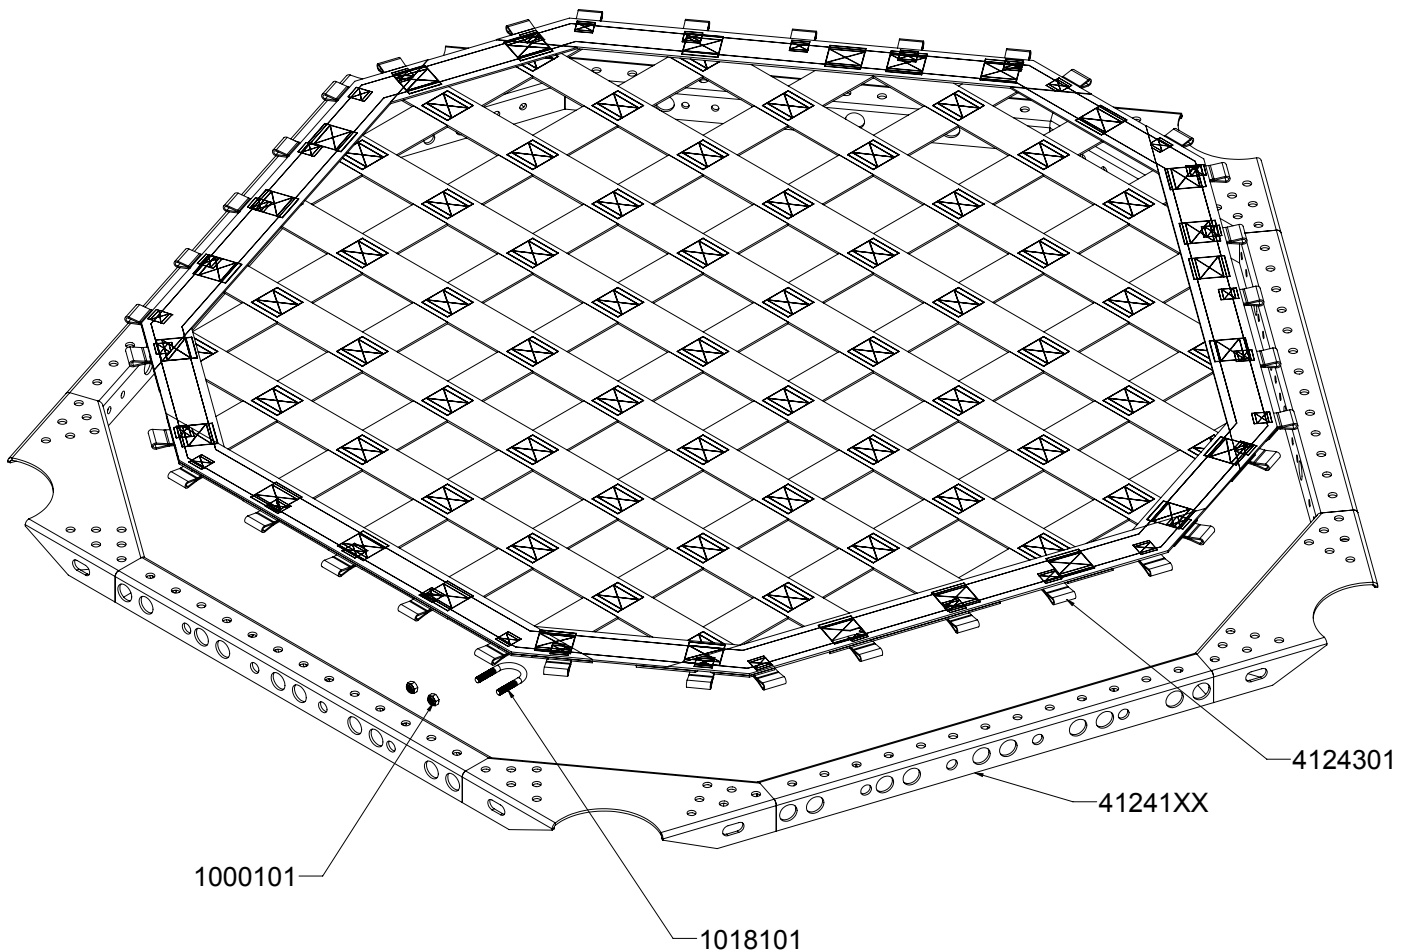

Place one u-bolt (1018101) into each tab on the net (4124301). Place the net into the deck frame (41241XX) and insert the u-bolts into the holes in the frame. Secure each u-bolt using two nuts (1000101). Tighten all of the u-bolts evenly until net is taut.

Please refer to Fusion 5 Spoke Frame assembly guide for instructions on attaching the assembled deck to the frame.



Xccent Play - www.xccentplay.com
100 Industrial Drive - Osceola, Wisconsin 54020
(800) 933-4748 (715) 294-2236 Fax: (715) 294-4517